


22-0105 Solo Operation Front Stand Instructions

Thank you for choosing the Woodcraft Solo-Operation Front Stand. We believe this stand to be the easiest stand to operate on the market today. **Please read the following instructions completely before using your new stand.**

IMPORTANT!!- Always use this stand in conjunction with a stable rear stand. The use of this stand by itself will cause your motorcycle to fall, causing injury to you and damage to your motorcycle.

HEIGHT ADJUSTMENT- Before using your stand, it will be necessary to adjust the height of the the stand. The stand is adjusted by (1) loosening the two pinch bolts on either side of this upper stanchion, (2) sliding the stanchion up or down and (3) re-torquing the pinch bolts. **Adjust the height so that when the stand is locked in the lift position there is 1 to 2 inches under the front tire.**

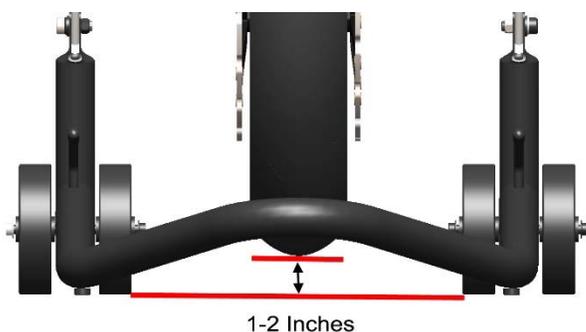

OPERATION -


(1) With the stand fully folded and the lift pin in place, feed the pin arm between the upper fairing and the front fender. On many motorcycles it is necessary to feed the arm in on the side of the fender to avoid scratching the fender (a soft cloth placed on top of the fender will help avoid scratches).

(2) Insert the pin into the hole in the bottom of the triple clamp. **Be sure that the pin is fully engaged** before you begin to lift.

(3) Slowly lower the handle on the bottom portion of the stand to the ground. Be sure that during this process the upper portion of the stand does not come in contact with the upper fairing of the motorcycle.


PIVOT BOLTS -

There are two pivot bolts connecting two main sections of the stand. Make routine checks on these bolts to be sure they are secure.

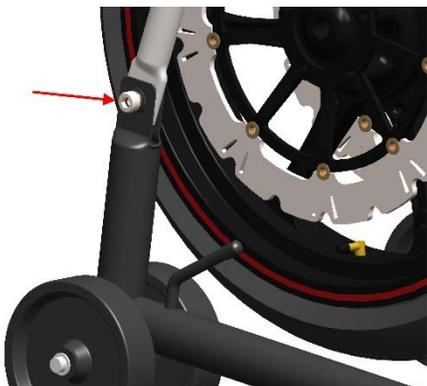


Axle & Caliper Hooks

This stand has incorporated posts for hanging your radial mount calipers. It does require that you have brake lines with enough freedom to move the calipers outward 4-5 inches. Simply place the caliper on the post to relieve stress on your brake lines. The plastic cap used for protection in shipping must be removed in most cases.

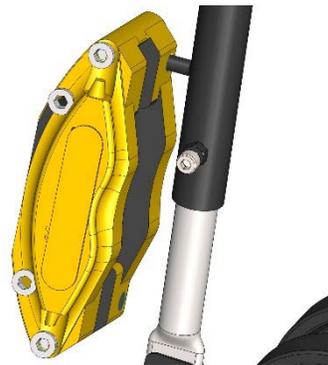

Axles, nuts and spacers can be stored on the lower posts, keeping them off the floor where they can get contaminated or lost.

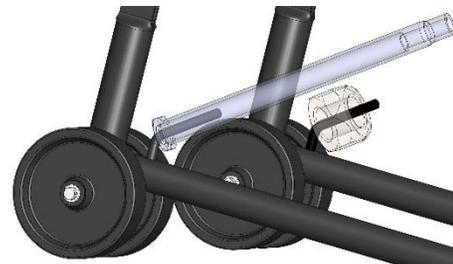

Thanks again for choosing Woodcraft. If you have any questions regarding the use of your front stand, feel free to call us.

105 Baldwinville Rd.
Winchendon, MA 01475

(978)297-2977

WOODCRAFT



22-0105 Front Stand Instructions

IN22-0105 R0417