



Installation Instructions

60-0247LIC Cover Protector


1) Attach the skid plate to the Woodcraft cover by bolting it from the inside. The 60-2500 rubber pad should be adhered to the back side of the cover.

IMPORTANT - USE THREADLOCKING COMPOUND ON THE THREE SKID PLATE MOUNTING BOLTS. Coat the threads completely and allow the threadlocking compound to fully set before use.

2) Install the Woodcraft cover with a using the included mounting hardware in the 4 locations shown at the right. Torque for these mounting bolts is about 7 ft-lbs.

3) Start the motorcycle and inspect for any leaks before riding.

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	60-0247LIC	Cover	1
2	04-BH63Z	6x63mm BHCS	4
3	60-2500	Cover Pad (not shown)	1
4	60-0900	Skid Plate (SS or Alum)	1
5	04-FH58 S/S	5x8mm FHCS	3

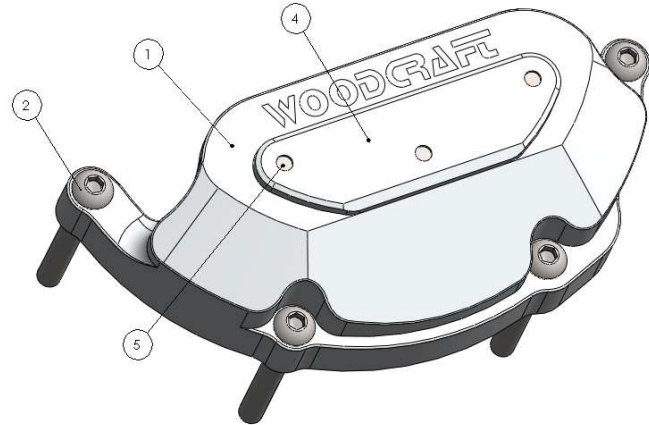

WARNING

Installation of Woodcraft Billet Covers involve removal and reinstallation of certain factory components such as fasteners, alternator stators and oil-retention gaskets. FAILURE TO INSTALL THESE COMPONENTS IN COMPLIANCE WITH ALL SPECIFIC INSTRUCTIONS SUPPLIED WITH BILLET COVER KIT, MAY CAUSE OIL LOSS OR DAMAGE TO ENGINE RESULTING IN LOSS OF CONTROL OF MOTORCYCLE AND SERIOUS INJURY OR DEATH.